

**DECK OPERATION INSTRUCTIONS-CII**  
**(4 Button Remote activation)****4 Button Remote with Bezel****Deck Up Direction**

1. Press red "Stop" button on remote to wake up
2. To run press blue "▲" Up button on remote , then Razor deck motor runs up.
3. To STOP, press red "Stop" button on remote at the desired deck height, then motor will stop then run down until locks are engaged.

**Deck Down Direction**

1. Press red "Stop" button on remote to wake up.
2. To run press green "▼" Down button on remote. Then, Razor deck motor will run up for ten seconds then stop, locks will disengage and then motor continue to run in the down direction.
3. At the desired height press the red "Stop" button on remote. Then, motor will stop, locks will release and then motor will continue down until locks are engaged.