



Technical Bulletin: 9

Revision: 1

Razor International Pty Ltd, Campbellfield VIC
service@razorinternational.com
1300 555 865

Wireless Hybrid Remote Pairing (Old)

Affected Product: 55-0401 Old style Wireless Hybrid.

Pairing Remote:

1. Press 'CH' on remote to select channel.
2. Press and hold any button on receiver until LEDs stay on, then release.
3. Press top remote button twice, LED will flash twice indicating remote is now coded.

Hands Free Coding with Unique Proximity Sensing:

Note: If you want to select a different channel but remote will not switch from channel 1, channel activation has not been done – refer 'Activating Extra Channels' instructions (No. 5 below).

1. Hold remote approx. 100mm near receiver.
2. Press 'CH' to select channel on remote.
Note: Default is channel 1 (LED on remote will indicate channel is selected)
3. Press 'LOCK' once, then release.
4. Press 'LOCK' again and hold button until the initialization LED **0** flashes twice (Bottom right LED). Remote is now coded.

Deleting Remotes:

1. To delete all remotes, press and hold any button on receiver for 10 seconds until all LEDs flash twice. This indicates remotes have been cleared.

Changing Allocated Channel on Receiver:

Note: This must be done within 10 seconds to avoid deleting all remotes.

1. Make sure your remote is close at hand. Use a coded remote that has had channel changed to the channel you wish to activate receiver.
2. Press and hold any button on receiver.
3. Press top button on remote once then release both receiver and remote buttons.

Activating Extra Channels on Remote:

Note: All remotes are sent out with only one channel activated.

1. Press and hold 'CH' and 'LOCK' button together until top left LED comes on solid.
2. Keep holding 'LOCK' but release 'CH'.
3. Press 'CH' to add channels (max 4). The channel LEDs will indicate which channels have been selected.
4. Release 'LOCK' once you have completed adding channels required.

[See next page for diagrams for reference.](#)

RECIIEVER

